# THE CITY OF SEASIDE **PROVIDES HIGH QUALITY** water for you!

The City of Seaside vigilantly safeguards its water supplies in order to continue providing safe drinking water for our residents and add to the livability of our great City. Once again, we are proud to report that last year, as in years past, your tap water met all U.S. **Environmental Protection Agency (EPA) and** state drinking water health standards.

Conserving our natural resources will help the health and longevity of our City as well as save you money. Here are eight tips to make a difference to your monthly bill and our community:



Irrigate at night or early morning to reduce water lost to evaporation. Make sure the water is not hitting nonpermeable surfaces such as sidewalks or running down the street.




Fix leaks quickly. Average faucet leak is 5 gallons a day or 2082 gallons a year. Not crazy but if 300 homes have a leak that is 624,600 gallons. Unfortunately, this is probably a low estimate.



When washing your car use a sprayer that shuts off when you are not using it.



*Check your toilet* to make sure the flapper is not leaking. A trick is to use something that will not harm the toilet but will make the water turn a color. Put it in the back of the toilet. If the water in the bowl turns that color you have a leak. Get a new



When you are looking for landscaping plants look for plants that do not require a lot of water. Native plants are a great option.

# What You Need to Know About **Your Water**

It's important to flush your water pipes after being absent from your home

If your home was built before 1987 lead solder may have been used to connect your copper pipes. The longer water sits in pipes better the chance you may develop lead and copper in your water. Let the water run from the tap before using it for drinking or cooking. Any time water in the faucet has gone unused for more than six hours, flush the tap by running the cold-water faucet until the water is noticeably colder, usually about 15-30 seconds. Toilet flushing or showering flush water through a portion of your home's plumbing system, you still need to flush the water in each faucet before using it for drinking or cooking.



East Hills Reservoir




**East Hills Booster Station** 

No one knows more about your water supply than City of Seaside Water Department. For more information, visit www.cityofseaside.us or call 503-738-5112

CDC - Lead in Drinking Water - The U.S. Centers for Disease Control and Prevention has information on lead's health effects and tips for protection from water and other common sources of exposure. © 2021 Goldstreet Design Agency, Inc.



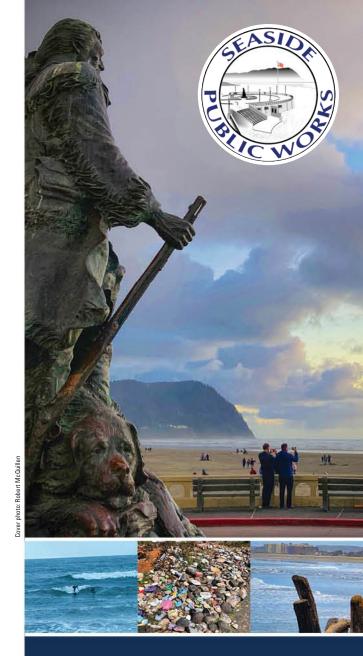

**CITY OF SEASIDE** Water Quality Report 2020

ation infor

regarding this report, please con For

**City of Seaside** Public Works\Water 989 Broadway

easide, Oregon 97138 phone: (503) 738-5112



every month City Hall (989 items related to water ar Council the City of Chambers of Monday urth Council the Broadway). at 7:00 pm ets



## WHY PROVIDE A WATER QUALITY REPORT?

The sources of drinking water (both tap water and bottled water) include rivers, lakes, streams, ponds, reservoirs, springs, and wells. As water travels over the surface of the land or through the ground, it dissolves naturally occurring minerals and can pick up substances resulting from the presence of animals and or human activity.

*Contaminants that may be present in source water include:* 

- Microbial contaminants, such as viruses and bacteria, which may come from sewage treatment plants, septic systems, agricultural livestock operations, and wildlife.
- Inorganic contaminants, such as salts and metals, which can be naturally-occurring or result from urban stormwater runoff, industrial or domestic wastewater discharges, oil and gas production, mining or farming.
- Pesticides and herbicides, which may come from a variety of sources such as agriculture, urban stormwater runoff, and residential uses.
- Organic chemical contaminants, including synthetic and volatile organic chemicals, which are byproducts of industrial processes and petroleum production, and can also come from gas stations, urban stormwater runoff, and septic systems.
- Radioactive contaminants, which can be naturallyoccurring or be the result of oil and gas production and mining activities.

In order to ensure that tap water is safe to drink, EPA prescribes regulations which limit the amount of certain contaminants in water provided by public water systems. Food and Drug Administration regulations establish limits for contaminants in bottled water which must provide the same protection for public health.

Therefore, the City of Seaside proudly produces a water quality report each year, so residents can learn about the health information of our water.

## WATER QUALITY RESULTS 2020\*

Contaminant	MCLG Health Goal	MCL EPA's Limits	Highest Level Detected Range Detected		Violation?	Year Sampled	Potential Source of Contamination		
			RADIOACTIVI	E CONTAMINA	A N T S				
Gross Alpha (pC/L)	0	15	ND	Single Sample	NO	NO 2018 Erosion of Natural Depos			
Radium 226/228 (pC/L)	0	5 ND Single Sample NO 20		2018	Erosion of Natural Deposits				
MICROBIOLOGICAL CONTAMINANTS									
Turbidity (NTU)	0	TT/never more than 1 NTU and less than 0.3 NTU in 95% of samples single sample 95% Below 0.30 NO		NO	2020	Soil Runoff			
INORGANIC CONTAMINANTS (IC)									
Copper (ppm)**	1.3	1.3 = AL	.121	ND-0.121	NO	2019	Corrosion of household plumbing systems. Erosion of natural deposits. Leaching from wood preservatives.		
ALL SITES BELOW AL									
Fluoride (ppm)	4.0	4.0	.96	0.7-1.12	NO	2020	Erosion of Natural Deposits. Water additive to promote strong teeth. Discharge from fertilizer and aluminum factories.		
Lead (ppb)**	0	15 = AL	0.0041	ND-0.0041	NO	2019	Corrosion of household plumbing systems. Erosion of natural deposits.		

#### ALL SITES BELOW AL: VOLATILE ORGANIC CONTAMINANTS (VOC)

Chlorine (ppm)	MRDLG	MRDL	1.3	0.42-1.3mg/l	NO	2020	Water Additive Used to Control Microbes.
Haloacetic Acid (HAA) (ppm)	0	0.060	.0091	NA	NO	2020	Byproduct of drinking water chlorination.
Total Trihalomethane (TTHM) (ppm)	0	0.080	.0464	NA	NO	2020	Byproduct of drinking water chlorination.

\*\*The most recent collection dates for lead and copper samples were August 2016.

Substance	Average Level Detected	Year <sup>1</sup> Sampled	Potential Source of Contamination	Substance	Average Level Detected	Year <sup>1</sup> Sampled	Potential Source of Contaminati
Alkalinity (ppm)	16	2020	Natural and industrial waste.	Nitrate (ppm)	.26	2020	Naturally occurring, runoff t fertilizer use.
Mercury (ppm)	ND	2011	Erosion of natural deposits; Discharge from refineries and factories; Runoff from landfills; Runoff from cropland.	Total Organic Compund	NO	2020	Byproduct of drinking water chlorination.
Nitrite (as N)	ND	2020	Erosion of natural deposits.	Nickel (ppb)	ND	2020	Petroleum based product.
Arsenic (ppm)	ND	2020	Erosion of natural deposits; Runoff from orchards.	Coliform Bacteria	0 Positive	2020	Improper disinfection
<b>pH</b> (ppm)	7.4	2019	Measure of corrosiveness of water.	Dautend			

### SEASIDE WATER TREATMENT PLANT FINISH WATER

#### PWS #4100799 MESSAGE FROM THE EPA

Drinking water, including bottled water, may reasonably be expected to contain at least small amounts of some contaminants. The presence of contaminants does not necessarily indicate that water poses a health risk. More information about contaminants and potential health effects can be obtained by calling the EPA's Safe Drinking Water Hotline (1-800-426-4791).

Some people may be more vulnerable to contaminants in drinking water than the general population. Immuno-compromised persons such as persons with cancer undergoing chemotherapy, persons who have undergone organ transplants, people with HIV/AIDS or other immune system disorders, some elderly, and infants can be particularly at risk from infections.

These people should seek advice about drinking water from their health care providers. EPA/CDC guidelines on appropriate means to lessen the risk of infection by Cryptosporidium and other microbial contaminants are available from the Safe Drinking Water Hotline (1-800-426-4791).

If present, elevated levels of lead can cause serious health problems, especially for pregnant women and young children. Lead in drinking water is primarily from materials and components associated with service lines and home plumbing. The City of Seaside is responsible for providing high quality drinking water, but cannot control the variety of materials used in plumbing components. When your water has been sitting for several hours, you can minimize the potential for lead exposure by flushing your tap for 30 seconds to 2 minutes before using water for drinking or cooking. If you are concerned about lead in your drinking water, you may wish to have your water tested. Information on lead in drinking water, testing methods, and steps you can take to minimize exposure is available from the Safe Drinking Water Hotline or at http://www.epa.gov/safewater/lead.

#### **\*IMPORTANT DRINKING WATER DEFINITIONS**

ppm (Parts per Million), ppb (Parts per Billion ), mg/L (Milligrams per Liter), NA (Not Applicable), ND (Not Detected), NR (Monitoring not required)

- MCLG Maximum Contaminant Level Goal: The level of a contaminant in drinking water below which there is no known or expected risk to health. MCLGs allow for a margin of safety.
- MCL Maximum Contaminant Level: The highest level of a contaminant that is allowed in drinking water. MCLs are set as close to the MCLGs as feasible using the best available treatment technology.
- TT Treatment Technique: A required process intended to reduce the level of a contaminant in drinking water.
- AL Action Level: The concentration of a contaminant which, if exceeded, triggers treatment or other requirements which a water system must follow.
- pCi/L Pico Curies per Liter
- NTU Nephelometric Turbidity Unit
- MRDLG Maximum residual disinfection level goal. The level of a drinking water disinfectant below which there is no known or expected risk to health. MRDLGs do not reflect the benefits of the use of disinfectants to control microbial contaminants.
- MRDL MAXIMUM residual disinfectant level. The highest level of a disinfectant allowed in drinking water. There is convincing evidence that addition of a disinfectant is necessary for control of microbial contaminants.
- Turbidity Turbidity is a measurement of suspended particles in the finished water that is used to measure filter performance in the water treatment process.
- TCR We are required to monitor your drinking water for specific contaminants on a regular basis. Results of regular monitoring are the an indicator of whether or not our drinking water meets health standards.